

# USER MANUAL

---

## FACE SHIELD

**PRODUCER:**

Jaguar Tomasz Chwilowicz  
Dworcowa 62, 62-400 Słupca, Poland

**Product:** Face shield**Type:** TEMIDA 1424162

**Classification:** PPE of category I. Protection in contact with cleaners with lower performance or longer contact with water;

### General information

Face shield made in Poland. The front made of transparent PET protects against the externalities such as low-base cleaners and water.

It is reusable, light and comfortable in use.

Elastic helps to adjust to the size of the head.

Before using the face shield, read and follow the steps below.

Keep this manual, it may be useful in the future.

To avoid unnecessary mistakes, make sure the person using the face shield is thoroughly familiar with its features.

Please keep this manual and make sure it stays with the helmet in case it is moved or sold.

For safety reasons, follow the precautions specified in the manual service, because the manufacturer is not responsible for any damage caused when using the face shield contrary to these instructions.

- The product meets the requirements of the Regulation of the European Parliament and of the Council (EU) 2016/425.

### FEATURES

- Alcohol-based disinfectants can be used
- Individually packed
- Adjustable length
- Reusable

### Construction

Front	Transparent PET material
Forehead	Polyurethane foam
Back	Elastic band
Weight	0,057 kg
The dimension of the transparent visor cover	38 x 23 cm


Legend:

A - elastic band

B - polyurethane foam

C - transparent PET material

D - screw

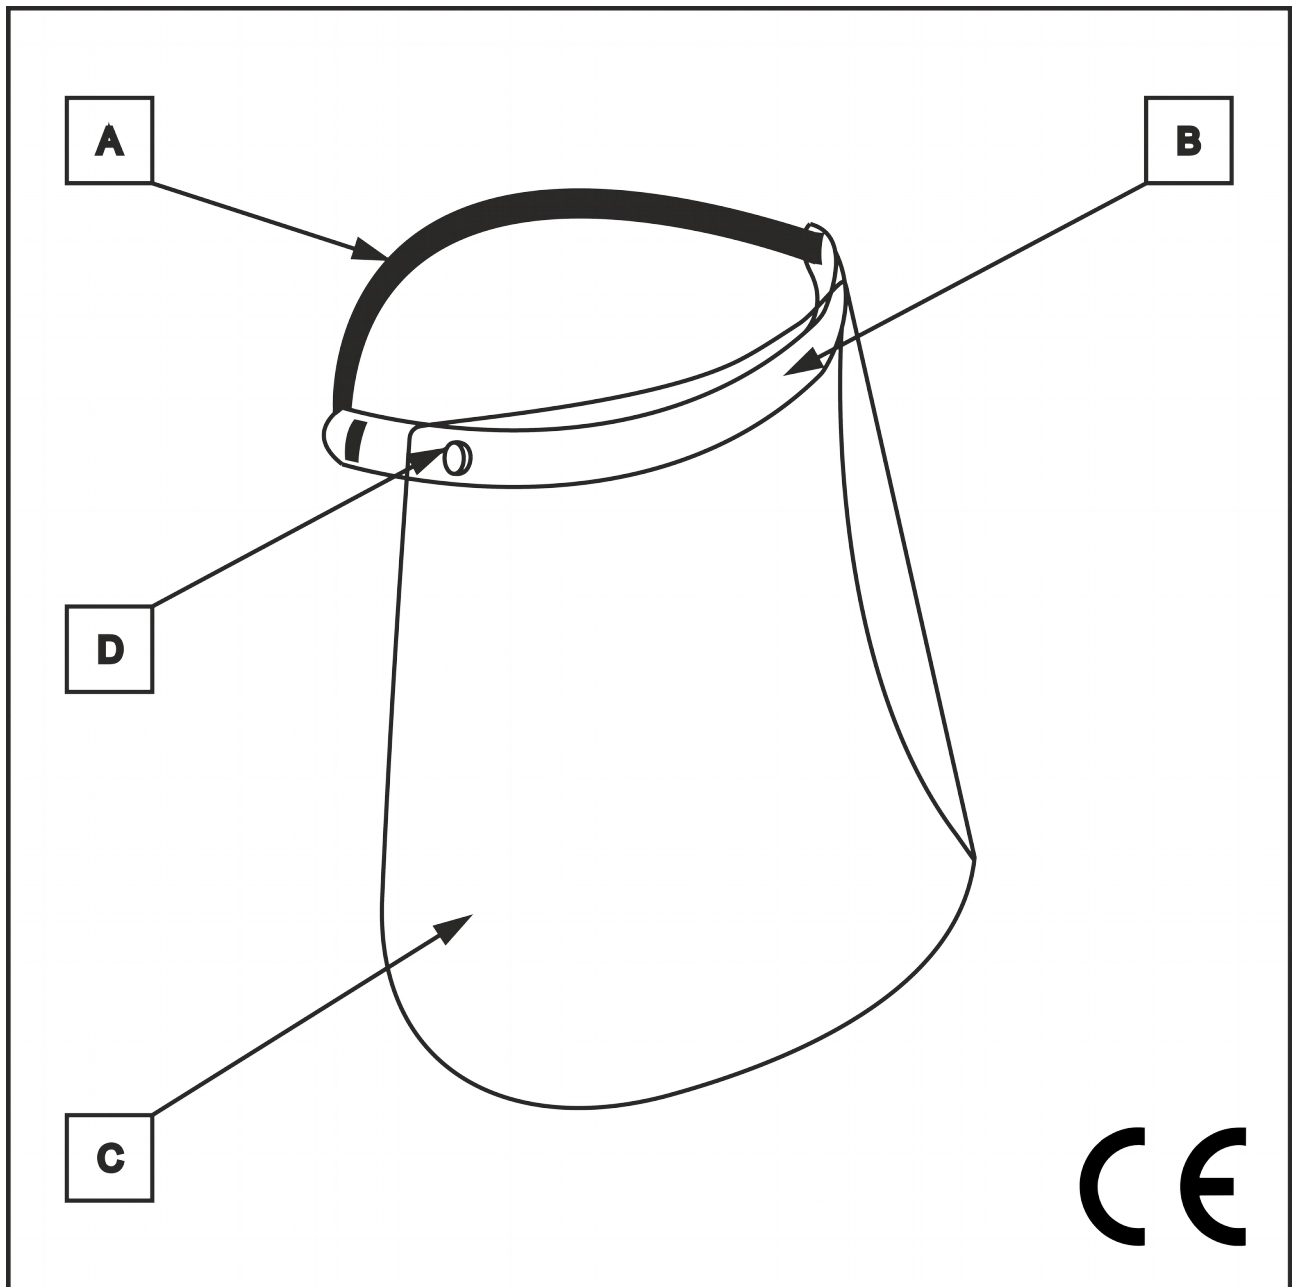

## Purpose

Protective face shield designed to protect against hazards of category I (point b) contact cleaning agents with weaker performance or prolonged contact with water.

It is good at such an activities like washing dishes, gardens and other outdoor work. It is used to protect the face from the influence of factors such as rain, splashes while washing dishes. It is intended for multiple use.

The product is not intended for use in conditions threatening the health and life of the user.

## Instructions for putting on the face shield

Take the face shield out of the foil package. Unscrew the screw on the belt, put transparent PET on the belt and tighten the screw. Put ready face shield on the head with elastic band fastened on a belt. Elastic should be on the back of the head.

## Instructions for removing the face shield.

Stretch the elastic band, take the face shield off the head.

## Face shield maintenance instructions

Before each use, check the cleanliness of the helmet.

Clean with disinfectants. Wipe with a soft, clean cloth, being careful do not scratch the transparent PET shield.

## Uses not allowed



The face shield should be handled with care. Follow the recommendations below.

The user may not:

- Use the face shield in potentially explosive atmospheres.
- Use the face shield to protect against factors that may be life and health threatening user.
- Keep the face shield close to heat sources and in direct sunlight.
- Reuse the face shield if it is damaged.
- Use the face shield after noticing any abrasions and holes and material.
- Use the face shield not in accordance with its intended use.

## Explanation of pictograms

Legend:

1. Mark of compliance with the Regulation of the European Parliament and of the Council (EU) 2016/42.



### Storage and transport

The visor in a disposable packaging should be stored at 5 ° C-25 ° C away from the source warm.

The storage place should be free from hazards that can mechanically damage the visor. During transport delivery, isolation from the conditions must be provided external / atmospheric and protect the packaging against mechanical damage.

### Declaration of conformity

The declaration of conformity is available on the website www at:

<https://jaguargift.com/pl/oferta/higiena-przylbice-c/>